


Changing the Sidelight Bulbs

The sidelight bulbs are located right next to the headlight bulbs.



Both are illuminated when the bike is on.

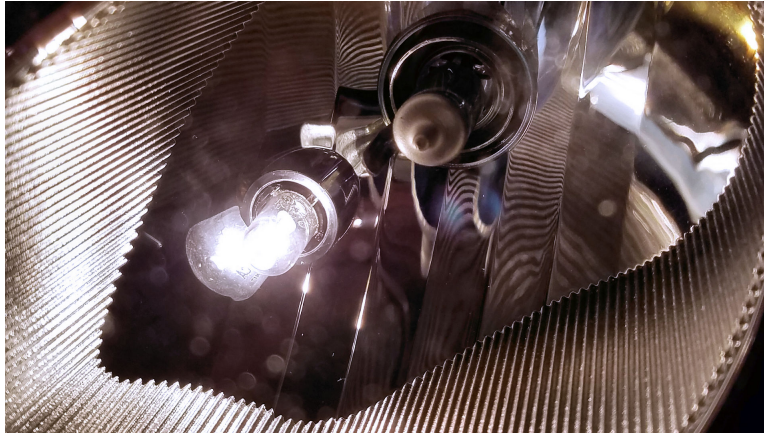

Changing the sidelight bulbs are as follows, according to the following steps from my Haynes Manual for the R1200 series.

R1200 RS

42 The low beam bulb is in the right-hand headlight and the high beam is in the left. To access the headlight and sidelight bulbs, remove the left and/or right-hand cockpit trim panel as required (see Chapter 7).

Headlight

43 Turn the bulb cover anti-clockwise to release it (see illustration).

44 Pull the wiring connector off the bulb (see illustrations).

45 Release the bulb retaining clip, noting how it fits, and withdraw the bulb, noting the orientation of the tab (see illustrations).

46 Fit the new bulb, bearing in mind the Note

at the beginning of this Section, and secure it with the clip.

47 Reconnect the wiring connector.

48 Fit the bulb cover, aligning the tabs then turning it clockwise (see illustration 6.43).

49 Check the operation of the headlight.

Sidelight


50 Turn the relevant bulb cover anti-clockwise to release it (see illustration 6.43).

51 Carefully pull the bulbholder out of the headlight, then pull the bulb out of the holder (see illustrations).


52 Fit the new bulb into the holder, then fit the bulbholder into the headlight.

53 Fit the bulb cover, aligning the tabs then turning it clockwise (see illustration 6.43).


54 Check the operation of the sidelight.

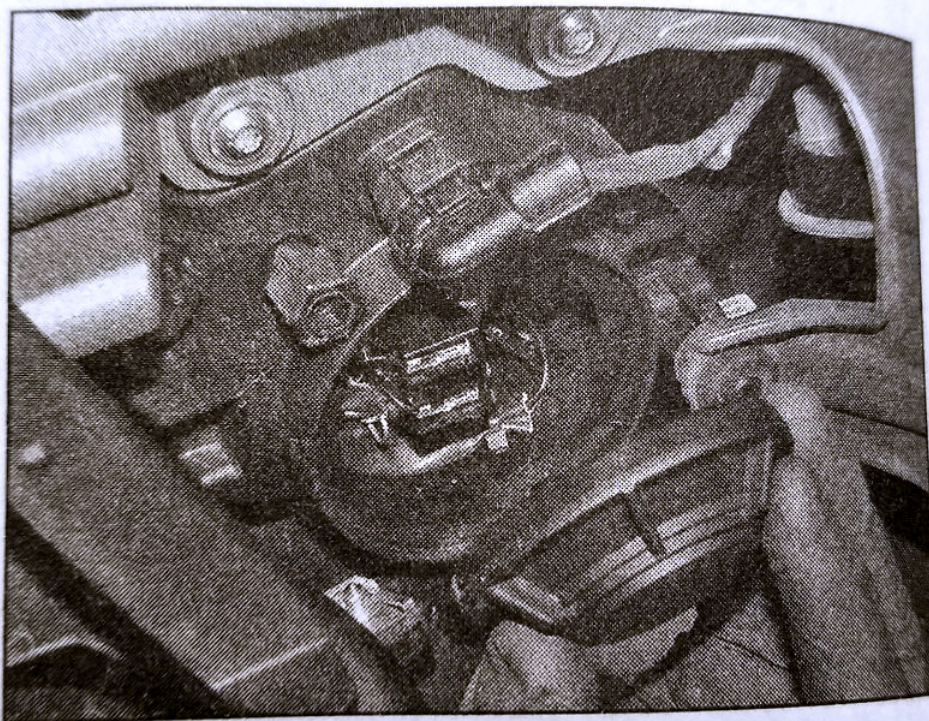

6.43 Remove the cover

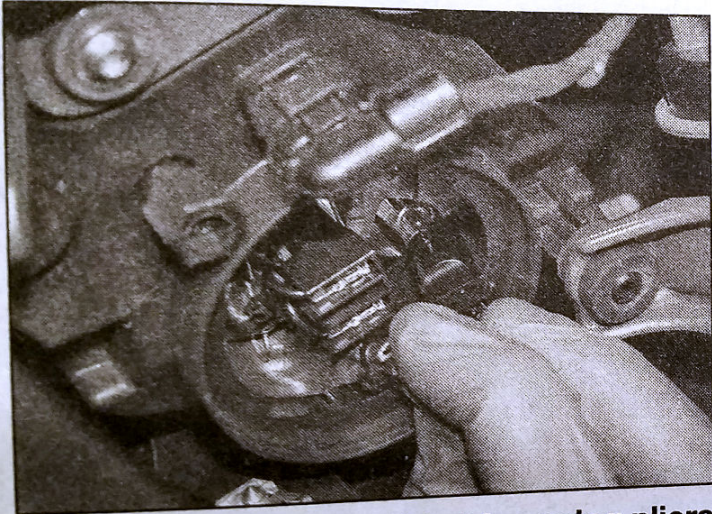

6.51a Withdraw the bulbholder, using pliers if necessary...

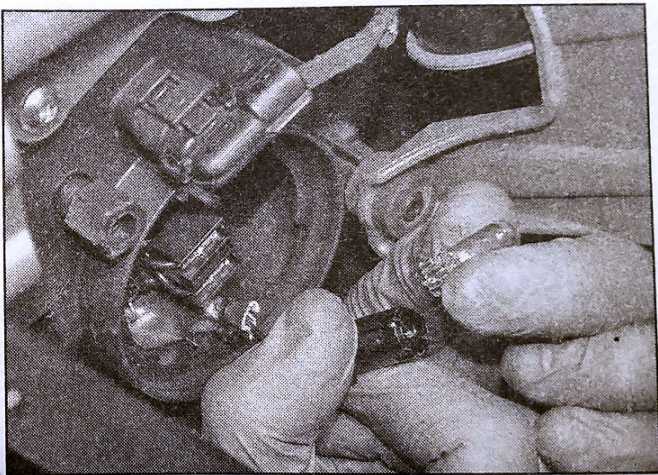

6.51b ...then carefully pull the bulb out